

5KEK1522



**KitchenAid**

## TABLE OF CONTENTS

### **WATER KETTLE SAFETY**

|  |   |
|--|---|
| Important safeguards.....                | 6 |
| Electrical requirements .....            | 9 |
| Electrical equipment waste disposal..... | 9 |

### **PARTS AND FEATURES**

|   |    |
|---|----|
| Parts and accessories.....              | 10 |
| Inserting and removing the filter ..... | 10 |

### **USING THE WATER KETTLE**

|  |    |
|--|----|
| Filling the Water Kettle.....                  | 11 |
| Setting the water temperature.....             | 12 |
| Water temperature guide for best results ..... | 12 |

### **CARE AND CLEANING**

|  |    |
|--|----|
| Cleaning the Water Kettle and base ..... | 13 |
| Descaling the Water Kettle.....          | 13 |
| Cleaning the filter .....                | 13 |

### **WARRANTY AND SERVICE**

|   |    |
|---|----|
| Household KitchenAid Water Kettle warranty..... | 14 |
| Customer service .....                          | 14 |

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

 **DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

 **WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. Do not touch hot surfaces. Use handles.
3. Do not submerge cord, plug, or Water Kettle in water or other liquids. The appliance must not be immersed.
4. Do not operate the Water Kettle unless the element is fully immersed.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
6. Keep the appliance and its cord out of the reach of children aged less than 8 years.

- 7.** Children should be supervised to ensure that they do not play with the appliance.
- 8.** Unplug Water Kettle from outlet and allow to cool before cleaning, or removing parts.
- 9.** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
- 10.** Use of replacement parts not recommended by manufacturer may result in fire, shock, or injury to persons.
- 11.** The kettle is only to be used with the stand provided.
- 12.** Do not let cord hang over counter or table edges, or allow to come into contact with heated surfaces.
- 13.** Do not use near, or on, a hot gas or electric burner stove.
- 14.** The Water Kettle should only be used to heat water.
- 15.** Never pour water on hot or burning fat.
- 16.** Never attempt to carry the hot appliance. Spilled hot fat may cause severe injuries or burns.
- 17.** Do not use Water Kettle without lid properly closed.
- 18.** Do not use Water Kettle with loose or weakened handle.
- 19.** Do not clean Water Kettle with cleaners, steel wool, or other abrasive materials. To prevent damage to the appliance do not use alkaline cleaning agents when cleaning; use a soft cloth and a mild detergent.
- 20.** Do not operate the kettle on an inclined plane.
- 21.** Do not move while the kettle is switched on.

## **WATER KETTLE SAFETY**

- 22.** Do not overfill Water Kettle. If the Water Kettle is overfilled, boiling water may be ejected.
- 23.** This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices, and other working environments.
  - farmhouses.
  - by clients in hotels, motels, and other residential-type environments.
  - bed and breakfast type environments.

**SAVE THESE INSTRUCTIONS**

## Electrical requirements

### **⚠️ WARNING**



#### **Electrical Shock Hazard**

- Plug into a grounded outlet.**
- Do not remove ground prong.**
- Do not use an adapter.**
- Do not use an extension cord.**
- Failure to follow these instructions can result in death, fire, or electrical shock.**


Voltage: 220 - 240 Volts A.C.  
Frequency: 50/60 Hertz  
Wattage: 2400 Watts for models 5KEK1522E and 5KEK1522S (kettles with European and Swiss plugs)  
3000 Watts for model 5KEK1522B (kettle with British plug)

**NOTE:** If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

## Electrical equipment waste disposal

### **Disposal of packing material**


The packing material is 100% recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### **Scrapping the product**

- This appliance is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment

and human health, which could otherwise be caused by inappropriate waste handling of this product.

 


- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.


For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# PARTS AND FEATURES


## Parts and accessories

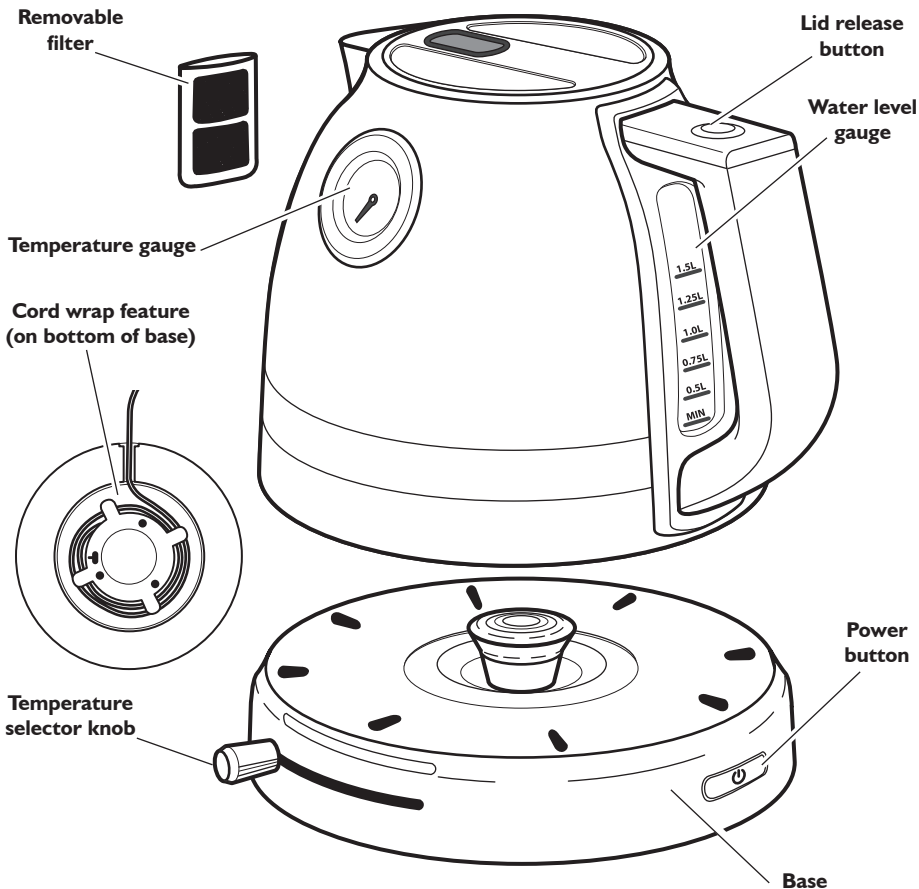

## Inserting and removing the filter

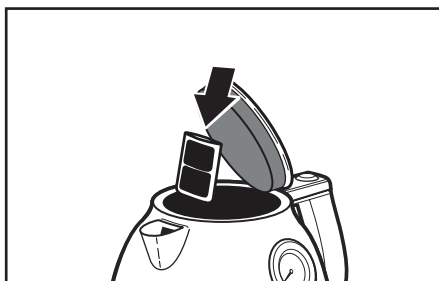 

 **Inserting the filter:** The filter is located behind the spout inside the Water Kettle. Open the lid. Slide the filter down into the slot behind the spout, making sure that the curve facing outward on the filter matches to the curve of the kettle.

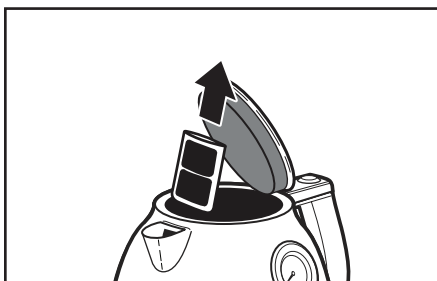


**Removing the filter:** Open the lid. Grasp the top of the filter, behind the spout, and pull out to remove.

## Filling the Water Kettle

 
### Before first use

Before using your Water Kettle, fill with water to the maximum level, boil, then discard water.


**IMPORTANT:** The Water Kettle is designed to heat water only. Do not put any other liquids or substances into the Water Kettle.

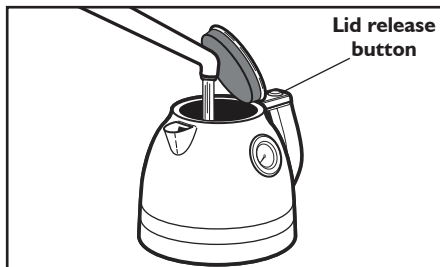

 
**1** Press lid release button to open lid. Fill Water Kettle with cold water.

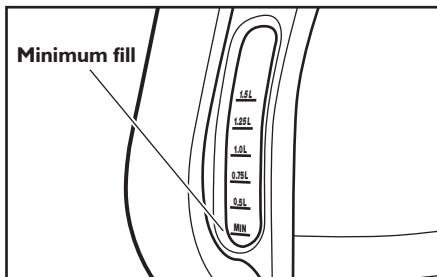

 **2** There must be a minimum of 0.25 L to operate.

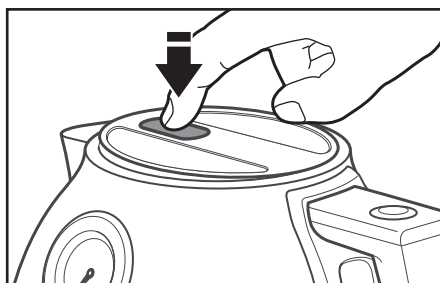

 **3** Push lid down until it locks into place.

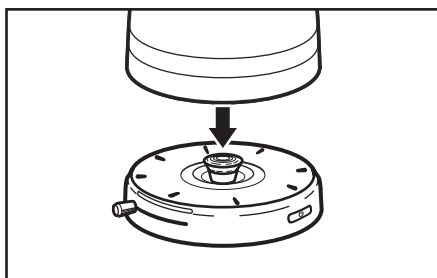


**4** Place Water Kettle on the base.




# USING THE WATER KETTLE

 
## Setting the water temperature

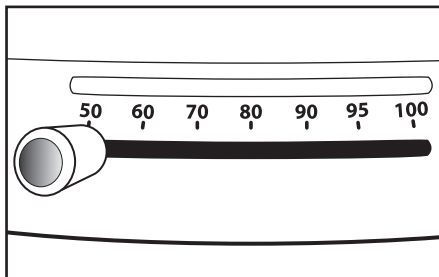

 - 1 Slide the temperature selector knob on the base to the desired setting (50-100° C).

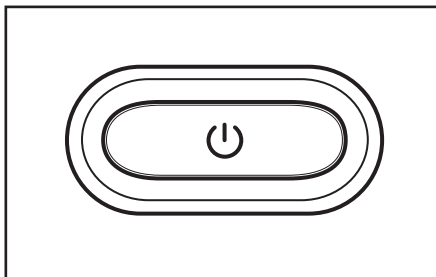

 - 2 Press the POWER button on the side of the base. The controls will light up and the Water Kettle will begin to heat.

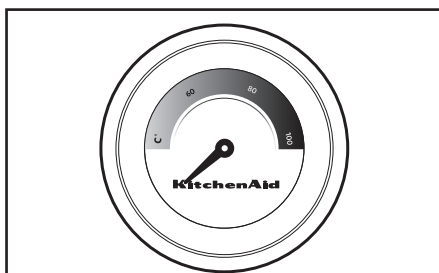

- 3 The temperature gauge will rise as the water heats.

**NOTE:** The Water Kettle will stop automatically once the set temperature is reached. The heating cycle can also be turned off manually by pressing POWER.


## Water temperature guide for best results
 
| 60°C                | 70°C                                  | 80°C                                    | 90°C   | 100°C                        |
|---------------------|---------------------------------------|---|--|------------------------------|
| <b>Delicate Tea</b> | <b>Green Tea</b><br>Gyokuro<br>Sencha | <b>Blooming Tea</b>                     | <b>Black Tea</b><br>Earl Grey<br>English Breakfast | <b>Boil Water</b>            |
|                     | <b>White Tea</b><br>Silver Needle     | <b>Chai</b><br>Green<br>White           | <b>Oolong Tea</b>                                  | <b>Chai</b><br>Red           |
|                     |                                       | <b>Green Tea</b><br>Bancha<br>Genmaicha | <b>Hot Chocolate</b>                               | <b>Herbal Tea</b><br>Tisanes |
|                     |                                       |   | <b>Instant Coffee</b>                              | <b>Instant Soup</b>          |
|                     |                                       |   |  | <b>Oatmeal</b>               |
|                     |                                       |   |  | <b>Rooibos Tea</b>           |
|                     |                                       |   |  | <b>Yerba Maté</b>            |

# CARE AND CLEANING

## Cleaning the Water Kettle and base


**IMPORTANT:** Before cleaning, always disconnect the Water Kettle from electrical outlet and make sure that the Water Kettle has cooled completely.

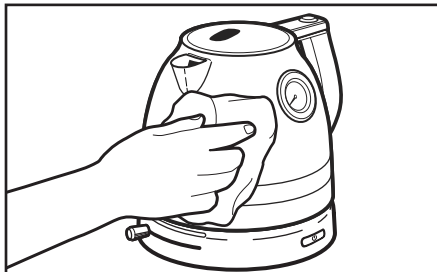

Wash Water Kettle and base by hand with a damp cloth. Dry and polish with a soft cloth. Abrasives and scouring agents of any kind are not recommended.

English

## Descaling the Water Kettle

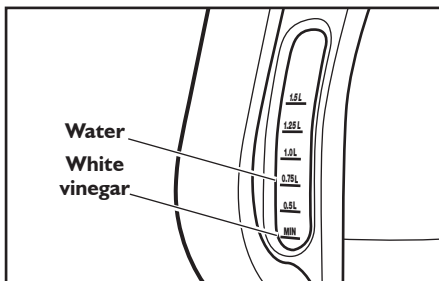 


Calcium deposits may form on the interior metal parts of the Water Kettle. To get the best performance from your Water Kettle, clean periodically. The cleaning interval will depend on the hardness of the water you put into the Water Kettle. The use of a commercial descaler is recommended.

If a commercial descaler is not available:

1. Fill the Water Kettle with white vinegar to the MIN (0.25 L) mark.
2. Add water to the 0.75 L mark.
3. Boil and allow to stand overnight.
4. Empty the solution from the Water Kettle.
5. Fill the Water Kettle with water, bring to a boil and drain out the water. Repeat this step twice. The Water Kettle is now ready to use.

## Cleaning the filter

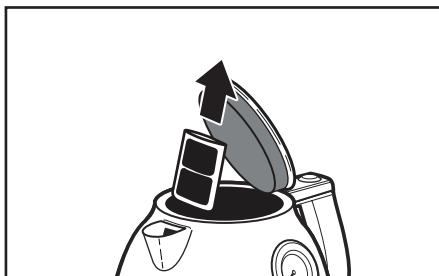 

Remove filter from Water Kettle (see "Inserting and removing the filter"), then rinse under running water.

**NOTE:** If calcium deposits remain on the filter, let it stand overnight in a solution of water and white vinegar. Rinse the filter thoroughly and place back in the Water Kettle.

# WARRANTY AND SERVICE

## Household KitchenAid Water Kettle warranty

| Length of Warranty:  | KitchenAid Will Pay For:  | KitchenAid Will Not Pay For:   |
|--|---|--|
| <b>Europe, Australia and New Zealand:</b><br><br>For Model 5KEK1522:<br>Three years Full Warranty from date of purchase. | The replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Centre. | A. Repairs when Water Kettle is used for operations other than normal household beverage or food preparation.<br><br>B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes. |

**KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.**

## Customer service

### In U.K. and Ireland:

For any questions, or to find the nearest KitchenAid Authorized Service Centre, please find our contact details below.

**NOTE:** All service should be handled locally by an Authorized KitchenAid Service Centre.

### Contact number for U.K. and Northern Ireland:

Tollfree number 0800 988 1266 (calls from mobile phones are charged standard network rate) or call 0194 260 5504

### Contact number for Ireland:

Tollfree number +44 (0) 20 8616 5148

### E-mail contact for U.K. and Ireland:

Go to [www.kitchenaid.co.uk](http://www.kitchenaid.co.uk), and click on the link "Contact Us" at the bottom of the page.

### Address for U.K. and Ireland:

KitchenAid Europa, Inc.  
PO BOX 19  
B-2018 ANTWERP 11  
BELGIUM

General hotline number:



00800 3810 4026

### In other countries:

For all product related questions and after sales matters, please contact your dealer to obtain the name of the nearest Authorized KitchenAid Service/Customer Centre.

[www.KitchenAid.co.uk](http://www.KitchenAid.co.uk)  
[www.KitchenAid.eu](http://www.KitchenAid.eu)

# KitchenAid

© 2016 KitchenAid. All rights reserved.  
Specifications subject to change without notice.