

# KitchenAid Stand Mixer Optional Attachment **Vegetable Sheet Cutter** 5KSMSCA



- **Sheet cutter attachment**  
Create sheets of zucchini, apples, cucumbers, potatoes, and other fruits and vegetables, and inspire fresh versions of everyday dishes
- **Two stainless steel blades: for thin or thick sheets**  
Allow to produce thinner or thicker sheets, depending on the preference or recipe
- **Fast hands-free results**  
Experience hands-free results as the mixer quickly powers through the fruit or vegetable of your choice
- **Premium metal construction**  
Provides durable long lasting performance
- **Convenient packaging storage case**  
To keep all parts in one place  
For easy storage and quick access
- **Quick clean-up**  
Both blades, cucumber and zucchini adapter, skewer and food holder are dishwasher-safe on the top rack  
The body can be wiped clean with a warm damp cloth
- **Designed exclusively to work with all KitchenAid Stand Mixer Models\***  
Simply attach to the multipurpose attachment hub powered by the stand mixer  
Enables easy and fast cutting



5KSMSCA

\* Mixer sold separately.

# KitchenAid Stand Mixer Optional Attachment

## Vegetable Sheet Cutter 5KSMSCA

### TECHNICAL DATA

Material		Stainless steel blades
Product dimensions	H x W x D	7.6 x 27.5 x 20.0 cm
Packaging dimensions	H x W x D	24.7 x 33.0 x 9.2 cm
Master pack dimensions	H x W x D	19.4 x 34.4 x 25.5 cm
Net weight		1.12 kg
Gross weight		2.26 kg
Master pack gross weight		4.78 kg
Master pack		2 units
Country of origin		China

REFERENCE	DESCRIPTION	EAN	EAN MASTER PACK (2 units)
5KSMSCA	Vegetable Sheet Cutter	5413184400200	5413184400217

### STANDARD PARTS



**Sheet cutter attachment main body**  
Can be wiped clean with a warm damp cloth.  
Made out of metal.  
Is not dishwasher-safe.



**Zucchini/cucumber adapter**  
Use only with soft foods.  
Dishwasher-safe on top rack.



**Food holder**  
Should be inserted all the way into the center of the food that will be cut.  
Dishwasher-safe on top rack.



**Food skewer**  
This skewer should be inserted/centered on the food.  
For hard foods, it should only be inserted approximately 5 cm, or to the first mark on the food skewer.  
Dishwasher-safe on top rack.



**Storage packaging case**  
Designed for easy access and simple storage.



**Stainless steel thick (approximate 1.8 mm) and thin (approximate 1.3 mm) blades**

Choose a blade based on your preference.  
Both blades work well for many types of recipes: baked entrées, wraps, sushi and much more.  
Create sheets of zucchini, apples, cucumbers, sweet potato and other fruits and vegetables.  
Dishwasher-safe on top rack.

